

# ps:<sup>®</sup>knock-out


## FOR DEFINED KNOCK-OUTS DIRECTLY ON BENDINGS

- production of the knock-outs in two steps:  
step 1: production of the knock-out  
step 2: flattening
- knock-outs possible directly on bendings as there is no embossing
- non-sharp-edged connections (risk for damaging the cable is decreased)
- slug can be removed on both sides
- suitable for all standard sheet thicknesses and sheet materials as well as surface coatings (powder, zinc, etc.)

TRUMPF

THICK TURRET

SALVAGNINI

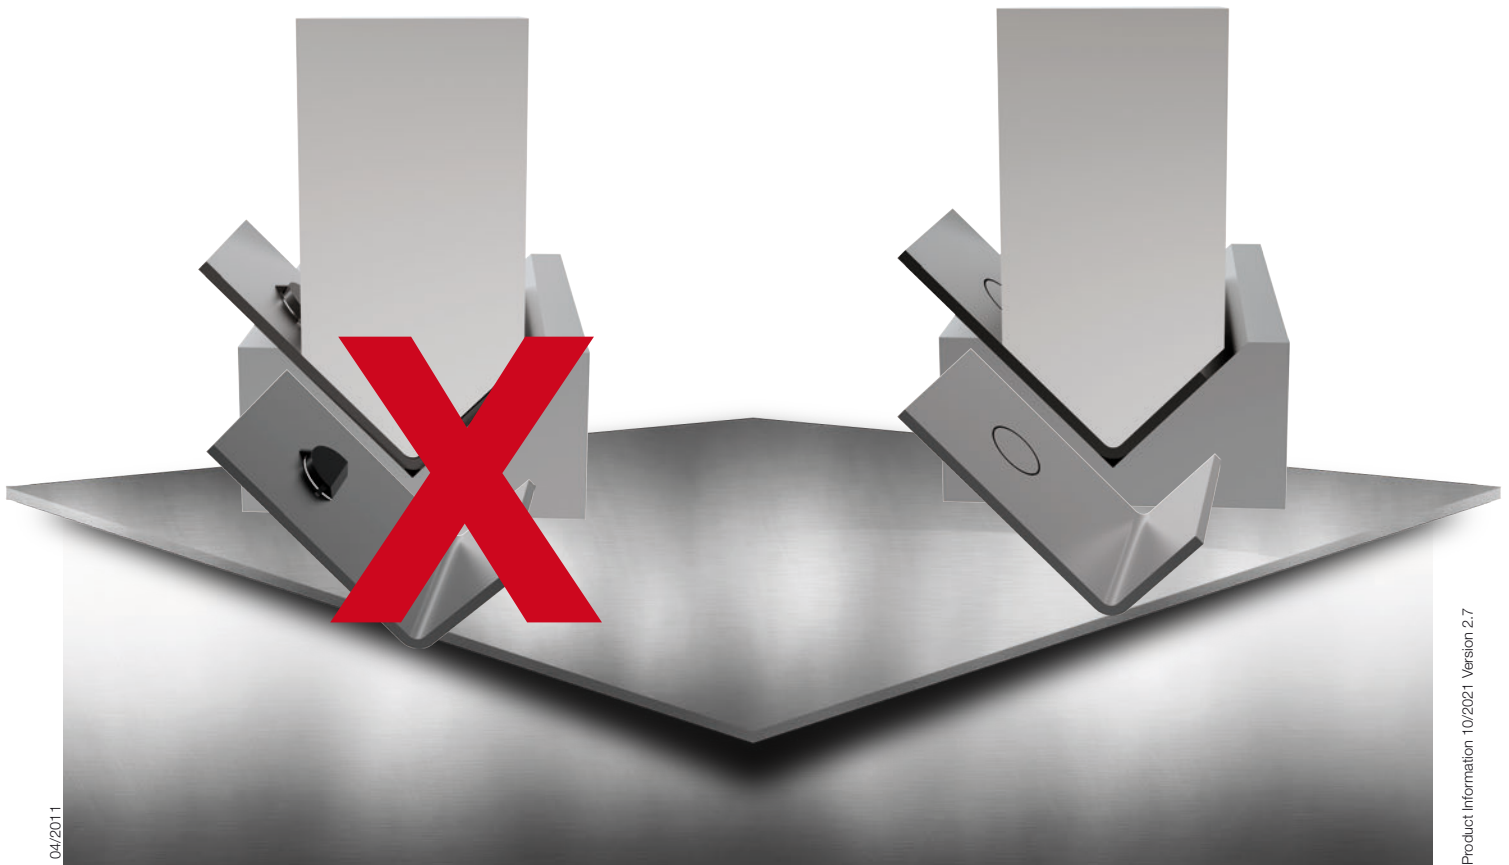

04/2011

Product Information 10/2021 Version 2.7